

## Exp No: 13 ) Stepper Motor Interfacing

### Aim


To interface the stepper motor with 8086 and run it in clockwise and anticlockwise directions.

Data Register address - C0

### Program

```
1000 C7 C7 18 10      MOV      DI,1018
1004 C6 C1 04        MOV      CL,04
1007 8A 05          MOV      AL,[DI]
1009 E6 C0          OUT      CO,AL
100B C7 C2 10 10     MOV      DX,1010
100F 4A            DEC      DX
1010 75 FD          JNZ     100F
1012 47            INC      DI
1013 E2 F2          LOOP    1007
1015 E9 E8 FF          JMP     1000
```

Address	For Clockwise Rotation	For Anticlockwise Rotation
1018	08	08
1019	01	02
101A	04	04
101B	02	01

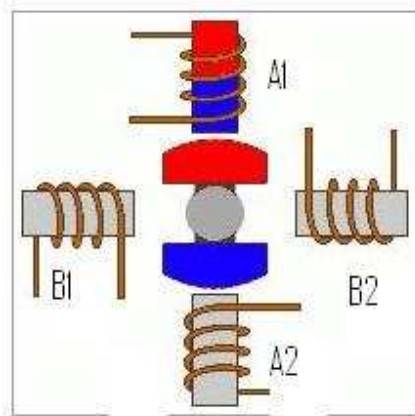

Clock wise						Anticlock wise					
Step	A1	A2	B1	B2		Step	A1	A2	B1	B2	
1	1	0	0	0	8	1	1	0	0	0	8
2	0	0	0	1	1	2	0	0	1	0	2
3	0	1	0	0	4	3	0	1	0	0	4
4	0	0	1	0	2	4	0	0	0	1	1